


The Manual of LED Gas Price Sign Project

Change the parameters of gas price sign via RF remote controller:

After correctly connect the gas price sign, press “up” button **5 times continuous**, enter into Editing interface of Parameter setting.

At this moment, pressing “up” or “down” button to edit the parameter of **flashing part**, and pressing “left” or “right” button to enter into **next parameter**.

There are **7** parameters total, Meaning and Value range as below:

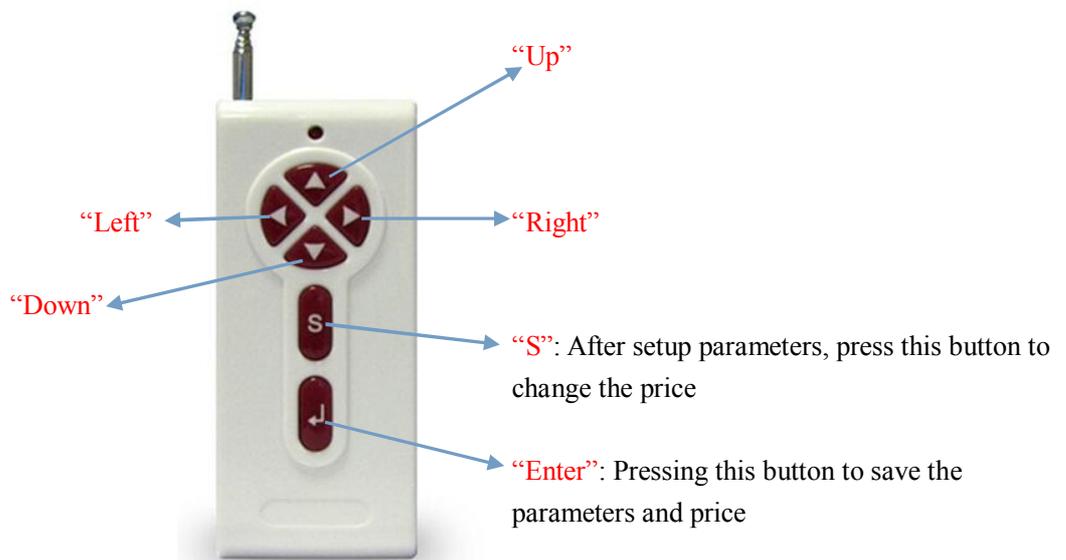

The RF remote control

Parameters Type	Value Range	Remark
1. Version Number		2.2
2. Single-side or Double-side	0 or 1	0: Single-side, 1: Double-side
3. How many signs in one side	1~12	For example: 2 signs in one side Pls select 2
4. How many big “8” in one sign	3~6	For example: 8.889/10 Pls select 3
5. Whether show 9/10	0 or 1	0: Don’t show 9/10, 1: Show 9/10 For example: 8.889/10 Pls select 1
6. Brightness level	0~8	0: Automatic adjustment (Light sensor) 1~8: Manual adjustment
7. Dot location	0~6	For example: 8.889/10 Pls select 1